

Download

SiecoSmart is available for both iOS and Android. Search the name "SiecoSmart" in App Store or Google Play.

Download App



Android



iOS

siecoelectronics.com

Design and specifications are subject to change without notice.
Designed by Siera / Assembled in PRC. Product may vary in appearance
and specifications.

Siera and Sieco are trademarks belonging to Siera Holding Group.

Warranty conditions according to www.siecoelectronics.com/warranty



User Manual


S20

Pair via pressing ringing button

Note: The wireless doorbell and door chime have been configured before leaving the factory. If the doorbell isn't paired by default, please use the following instructions to pair it manually with the S42 Video Doorphone.


Step 1:

Supply power to your wireless doorbell and turn on your S42 Video Doorphone

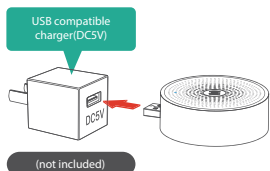


Step 2:

A short press on the RESET button on the wireless doorbell, and you will see the indicator flashes blue, indicating device is in pairing mode.

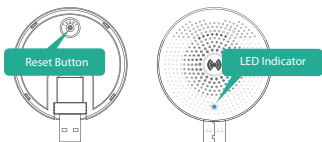


Step 3:

Press the S42 Video Doorphone button, and the wireless doorbell will ring in response. Pairing succeeds, and the wireless doorbell indicator will be in solid blue.

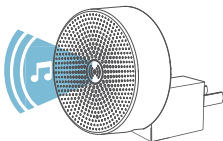

Description

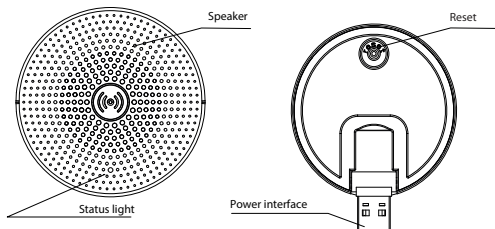

Description

Mini USB	DC5V±10%,USB power supply
Reset	Press the RESET for 5s to restore Factory Settings; Click the RESET button to pair the doorbell
Status light	Blue light blinking: Awaiting for configuration; Blue light solids on: Configuration completed

Functions

Ringtone to choose

You can choose your own ringtone among the four ringtones

Ringtone of volume

The wireless doorbell volume could be adjusted by sliding the volume of your smartphone

In-App Pairing

The wireless doorbell, previously powered, must be close to the S42 Video Doorphone and the mobile device with the "SiecoSmart" App.

Step 1:

Open the App and click on the configuration gear on the S42 Video Doorphone screen.

Step 2:

Select "Chime Setting".

Step 3:

Select "Wireless Chime."

Step 4:

Press "Chime Pairing", a message will be displayed on the screen, press "Pair" and the message "The pairing command sent successfully!" will be received.

Step 5:

On the "Wireless Doorbell" press the "RESET" button once until the blue LED flashes.

Step 6:

Press the S42 Video Doorphone button, and the wireless doorbell will ring in response, indicating successful pairing.



Note: If the setting fails, please press the "RESET" button for 5 seconds to reset your doorbell and then click the "RESET" button again to add it.